


JTC-1023A

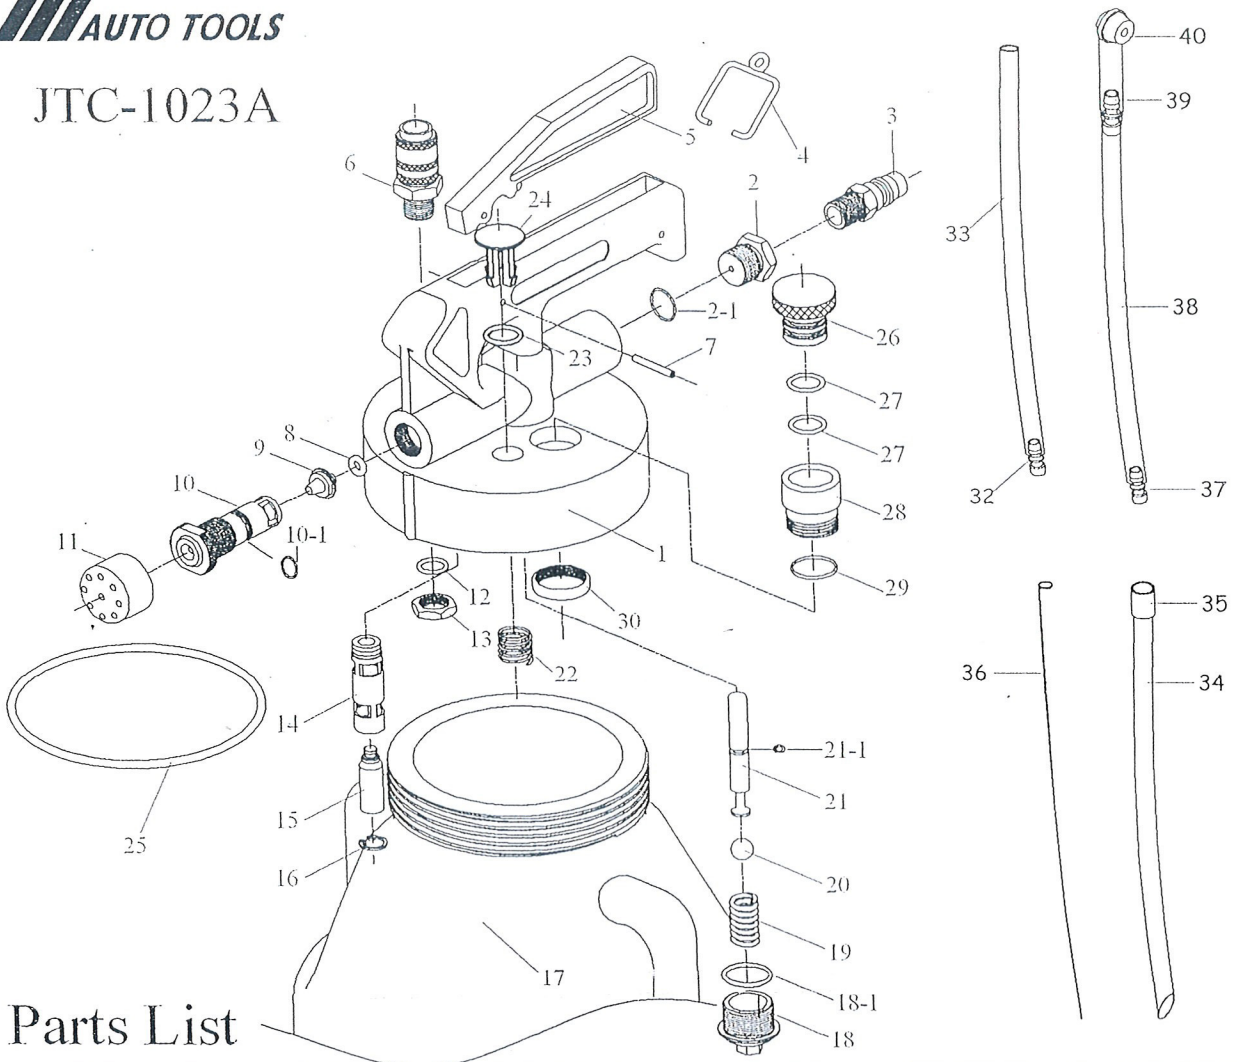

Parts List

Index No.	Parts No.	Description	Remarks	Index No.	Parts No.	Description	Remarks
1	JTC-1023A-1	Cover Housing		20	JTC-1023A-20	Steel Ball	
2	JTC-1023A-2	Inlet Nut		21	JTC-1023A-21	Valve	
2-1	JTC-1023A-2-1	O Ring $\phi 13 \times 2.5$		21-1	JTC-1023A-21-1	O Ring $\phi 3.9 \times 2$	
3	JTC-1023A-3	Air Inlet Coupler		22	JTC-1023A-22	Spring	
4	JTC-1023A-4	Fixing Ring		23	JTC-1023A-23	O Ring $\phi 13 \times 2$	
5	JTC-1023A-5	Trigger		24	JTC-1023A-24	Safe Valve	
6	JTC-1023A-6	Fluid Inlet Coupler		25	JTC-1023A-25	Packing	
7	JTC-1023A-7	Pin		26	JTC-1023A-26	Oil Outlet Cover	
8	JTC-1023A-8	O Ring $\phi 4.42 \times 2.62$		27	JTC-1023A-27	O Ring $\phi 15 \times 2$	
9	JTC-1023A-9	Vacuum Valve		28	JTC-1023A-28	Oil Outlet Housing	
10	JTC-1023A-10	Vacuum Body		29	JTC-1023A-29	O Ring $\phi 20 \times 1.2$	
10-1	JTC-1023A-10-1	O Ring $\phi 11 \times 2$		30	JTC-1023A-30	Lock Nut	
11	JTC-1023A-11	Noise-Reduction Net		31	-	-	
12	JTC-1023A-12	O Ring $\phi 10 \times 1.8$		32	JTC-1023A-32	Coupler	
13	JTC-1023A-13	Lock Nut		33	JTC-1023A-33	$\phi 9.5 \times \phi 6.5$ PU Hose	
14	JTC-1023A-14	Safety Valve		34	JTC-1023A-34	$\phi 5.3 \times \phi 6.7$ Nylon Hose	
15	JTC-1023A-15	Safety Cup		35	JTC-1023A-35	$\phi 6.7 \times \phi 8$ Adapter	
16	JTC-1023A-16	C Locker		36	JTC-1023A-36	Leader Wire	
17	JTC-1023A-17	Tank 8.5L		37	JTC-1023A-37	Coupler	
18	JTC-1023A-18	Locking Screw		38	JTC-1023A-38	$\phi 4 \times \phi 8$ Silicon Hose	
18-1	JTC-1023A-18-1	O Ring $\phi 19 \times 3$		39	JTC-1023A-39	Adapter	
19	JTC-1023A-19	Spring		40	JTC-1023A-40	Brake Coupler	