


# Air Valve Lapper

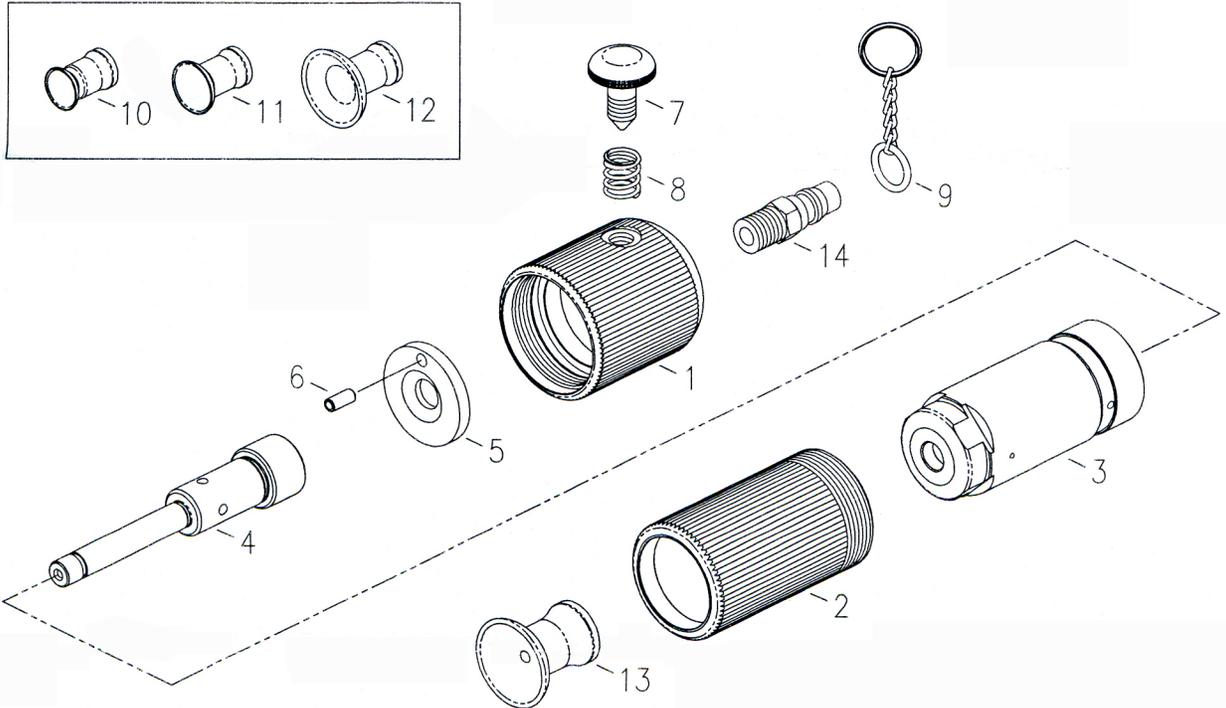

No.	Part No.	Description	Q'ty
1	340500100	Housing Cover	1
2	340500200	Housing	1
3	340500300	Cylinder	1
4	340500400	Piston	1
5	340500500	Rubber Gasket	1
6	340500600	Orientation Tube	1
7	340500700	Regulator	1

No.	Part No.	Description	Q'ty
8	340500800	Spring	1
9	340500900	Chain Sling	1
10	340501001	Sucker-16mm	1
11	340501002	Sucker-20mm	1
12	340501003	Sucker-30mm	1
13	340501004	Sucker-35mm	1
14	793104303	Coupler	1