



Ref No.	Part No.	Description
1	RL14601	Handle
2	RL14602	Trigger Button
3	RL80513	Pin
4	RL14604	Screw
5	RL20109	O-Ring
6	RL80504	O-Ring
7	RL14607	Throttle Pin
8	RL80407	Spring
9	RL80503	O-Ring
10	RL14610	Screw
11	RL20105	O-Ring
12	RL14612	Air Regulator
13	RL14613	Screw (6)
14	RL14614	Gasket
15	RL14615	Screw (2)
16	RL80515	O-Ring (2)
17	RL14617	Valve Unit Body
18	RL14618	Valve Rod
19	RL14619	Gasket
20	RL48223	Retaining Ring (2)
21	RL14621	Hollow Shaft
22	RL14622	Screw (5)
23	RL14623	Hollow Shaft (3)
24	RL14624	Outer Link Rod (2)
25	RL14625	Middle Link Rod
26	RL14626	Hollow Shaft

Ref No.	Part No.	Description
27	RL14627	Top Piston
28	RL14628	Bottom Piston
29	RL14629	Top Piston
30	RL14630	Screw (2)
31	RL14631	Roll Pin
32	RL14632	Spacer (2)
33	RL14633	Body
34	RL14634	Gasket
35	RL14635	Front End Housing
36	RL14636	Plug
37	RL14637	Spring Pin
38	RL14638	Screw (2)
39	RL14639	Screw (4)
40	RL14640	Silencer Guard
41	RL14641	Nosepiece
42	RL14642	Screw (2)
43	RL20104	Cap
44	RLAA003	Mini Oiler
45	RL-B50	Swivel Connector
46	RL13151	Service Wrench(2.5mm)
47	RL14033	Hex. Wrench(3.0mm)
48	RL14648	Nosepiece
49	RL14649	Saw Blade
50	RL14650	Saw Blade
51	RL80505	O-Ring