


PART LIST

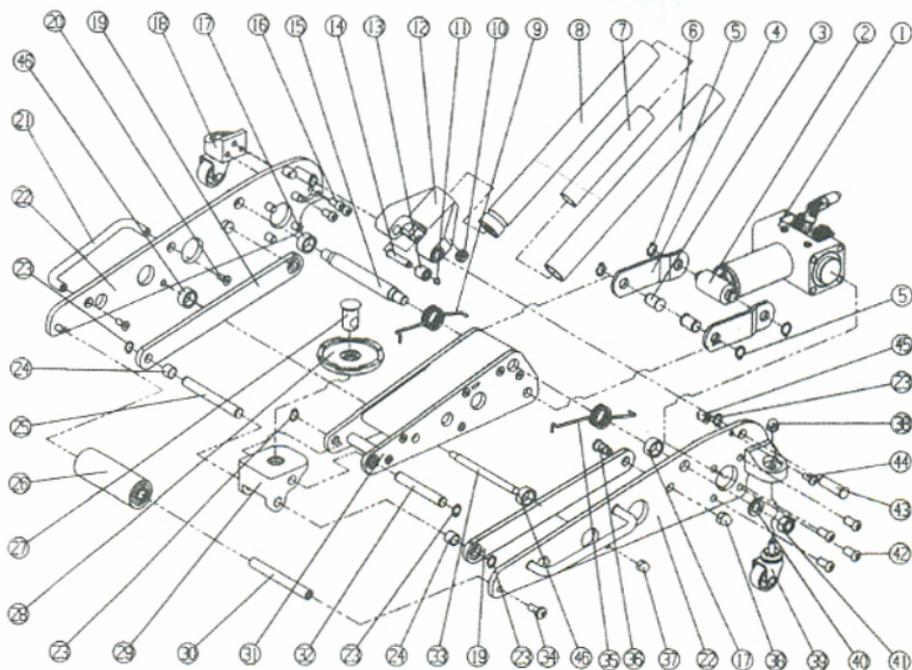

Item NO.	Description	QTY	Item NO.	Description	QTY	Item NO.	Description	QTY
1	Power unit assembly	1	16	Nut M10x20	6	31	Lifting arm assembly	1
2	Coupling Connector	1	17	Bushing for support shaft	2	32	Shaft for saddle base	1
3	Pin for Return Rod	2	18	Wheel Stand	2	33	Shaft for lifting arm	1
4	Return Rod	2	19	Connecting Rod	2	34	Bolt M10x25	1
5	Spring Washer 18	4	20	Nut for side handle	4	35	Torsion Spring (left)	1
6	Upper Handle	1	21	Side handle	2	36	Shaft for connecting rod	2
7	Connector Tube	1	22	Wall plate Assembly	2	37	Nut M10	2
8	Lower Handle	1	23	Lock washer 16	6	38	Nut M12	4
9	Torsion Spring (Right)	1	24	Pin for connecting Rod	2	39	Caster Assembly	2
10	Handle Socket Screw	1	25	Connecting Rod pin/ie	1	40	Washer 16	2
11	Washer 10	1	26	Front wheel	1	41	Hex Nut M16	2
12	Handle Socket	1	27	Saddle Shaft	1	42	Hex Bolt M12x25	8
13	Wheel	2	28	Saddle	1	43	Shaft for handle socket	2
14	Wheel Pintle	1	29	Saddle base	1	44	Hex bolt M8x20	2
15	Supporting Shaft	1	30	Lifting arm assembly	1	45	Location block	2
						46	Small Rolle	2